


COBALT

P&G AND DYNAMIC JOYSTICK

- 1a. Dynamic Joystick- **no longer available.**
Dynamic Joystick Overlay- DC GJS81043
- b. P&G Joystick- LDM400001PG
- c. P&G Joystick Assy.- LDM400001PG-C
* Once stock is gone replace with 1c.
2. Gear Box Assm.- Left - LDR420002-05
Right - LDR420002-06
Motor Brush (each)- LDR420002-07
Axle Key- TITAN-40
3. Circuit Breaker- LRM302107
4. Battery (12V21Ah)- LRM412123
5. Charger (2A)- LRM302111
6. Bearing Assm.- **LRB402348**
7. Caster Fork Assm.- LDR420006
8. Front Caster Grey- LDR420007
Black- LDR420007-02
- 8a. Caster Bearing- STDS1011
- 8b. Caster Axle- STDS1M2210
9. Rear Wheel- Grey-
Black- LDR420008-02
10. Frame Lock Bolt Assm.- LDR420010
11. Anti-tipper Wheel- LDR420009-01
12. Seat Assm.- LDR420011
13. Front Shroud Blue - **no longer available**
Front Shroud Red - LDR420012-01R
Rear Shroud Blue - LDR420012-02B
Rear Shroud Red - **no longer available.**
14. Footrest- LDR410016
15. Battery Hold Down Strap- LDR420003-02
16. Shroud Knob- LDR410115-03

17. Dynamic Joystick Knob- DC GJS0090
Dynamic Joystick Boot- DC GJS0091
 18. Dynamic Joystick Arm- LDM400001-04
P&G Joystick Arm- LDM400001-04PG
a. Dynamic Joystick Screws (pr)-LDM400001-01
P&G Joystick Screws (pr)- LDM400001-01PG
 19. Joystick Mounting Bracket- LDM400001-05
Joystick Adjustment Knob- LDM400001-07
 20. Arm Assm.- Left - LDR420016L
Right - LDR420016R
 21. Seat Post 17.96mm- LDR420000-23 **
Seat Post 19.45mm- LDR420000-FN ***
 22. Battery Cable- LDR420000-01
 23. Dust Cap- LDR4110
 24. Front Articulating Bar- LDR420000-26
 25. Wiring Harness- LDR420000-12 *
 26. Handle- LDR420000-19
 27. Contact Block Set- LDR420001
 28. Front Frame- **no longer available**
 29. Battery Bag- LDR420003-01
 30. Seat Plate 17.96mm- LDR420011-02 **
Seat Plate 19.45mm- LDR420011-FN ***
- * Uses 40amp fuse.
** Serial # 1L1207.... and before.
When these part run out must replace with both a 19.45mm seat post and seat plate.
*** Serial # 1L1208.... and after.

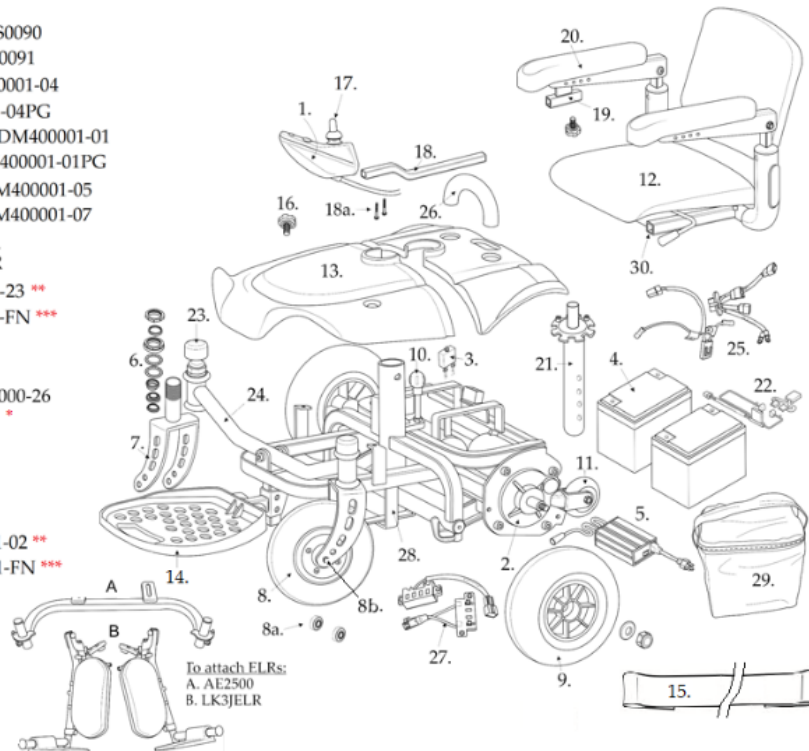

01/07/21

Diagrams

Home