




GEO

Only parts listed are available.

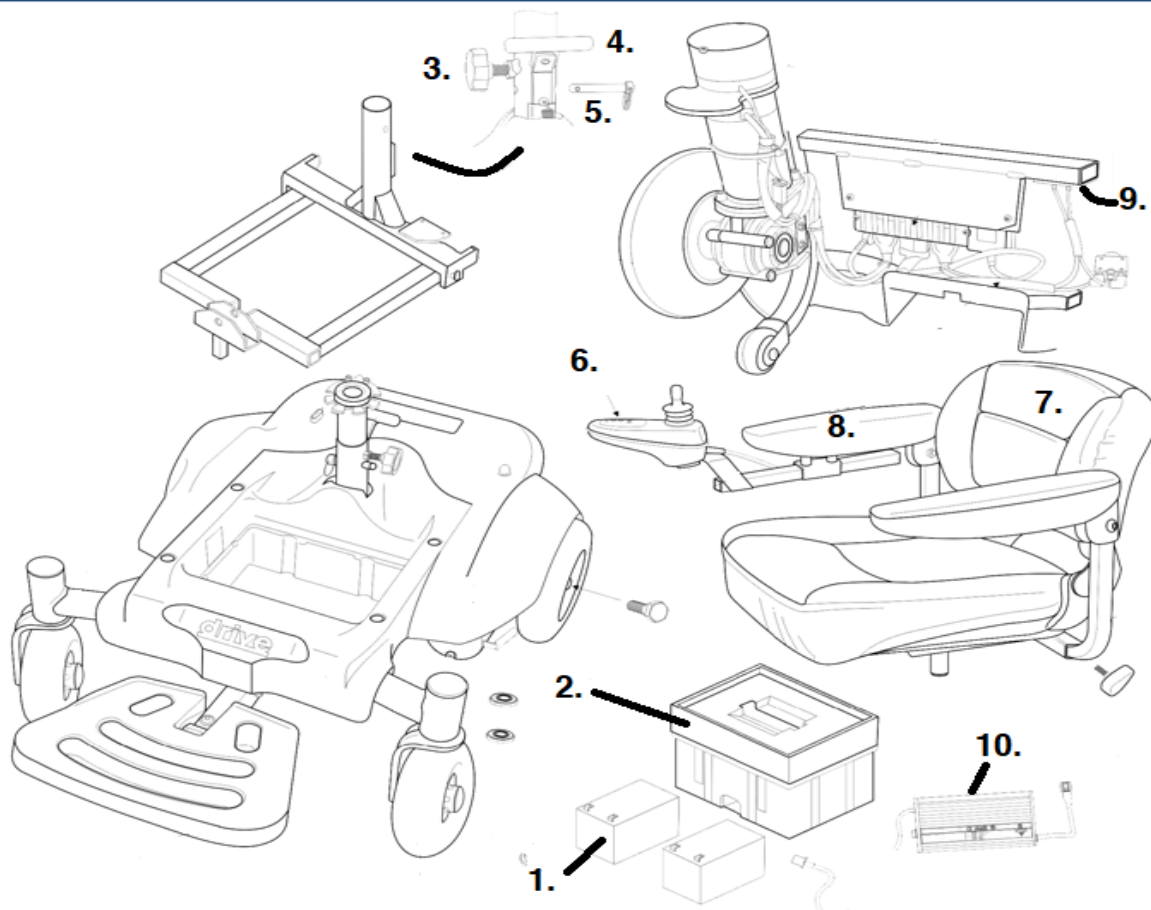

1. Battery (2 needed)- LRM402109
2. Battery Case S350169706
Battery Sace w/Batteries S350169707
3. Tension Knob- S350169715
4. "T" Handle Frame Lock- S650169716
5. Seat Pin- S350169717
6. Joystick/Controller- S350169701

7. Captain Seat- S350169733 [1]
8. Arm Pad Left- VENT31
Arm Pad Right- VENT32
9. Front Contact- S31056 [1]
Rear Contact- S31057 [1]
10. Charger- S31055 [2]

[1] When stock is gone the part is no longer available
[2] When stock is gone use part number LRM302111

01/08/2021