




INTREPID



1a. Dynamic Joystick [1]

- 1a. Dynamic Joystick Overlay- DC GLA81043
- 1b. P&G Joystick- LDM400001PG
- 1c. P&G Joystick Assembly- LDM400001PG-C
- 1d. Dynamic Joystick Screws (pr)-LDM400001-01
- 1d. P&G Joystick Screws (pr)- LDM400001-01PG
- 2. Joystick Knob- DC GJS0090
- 3. Joystick Boot- DC GJS0091
- 4. Dynamic Joystick Arm- LDM400001-04
- 4. P&G Joystick Arm- LDM400001-04PG
- 5. Joystick Adjustment Knob- LDM00001-07
- 6. Motor/Gear Box Left- LDM400002-01 [2]
- 7. Battery (2 needed)- LRA402208
- 8. Front/Rear Caster Gray- LDM400005
Black- TITAN-03
- 9. Caster Bearing- STDS1011
- 10. Drive Wheel Grey- LDR410008
- 11. Arm Pad- LDR410110
- 12. Arm Assembly Left- LDR410011L
- 12. Arm Assembly Right- LDR410011R
- 13. Armrest Knob- LDR410011-11
- 14. Headrest- ST-HEADREST
- 15. Seat Belt- LRC402414
- 16. Seat Post- LRC402414-13
- 17. Shroud Knob- LDR410115-03
- 18. Circuit Breaker- LRB402307
- 19. Dust Cap- LDR4110
- 20. Front/Rear Fork- LDM400013
- 21. Fork Stem Bearing- LRB402348
- 22. Charger- LRA402210
- 23. Front Axle- STDS1M2210

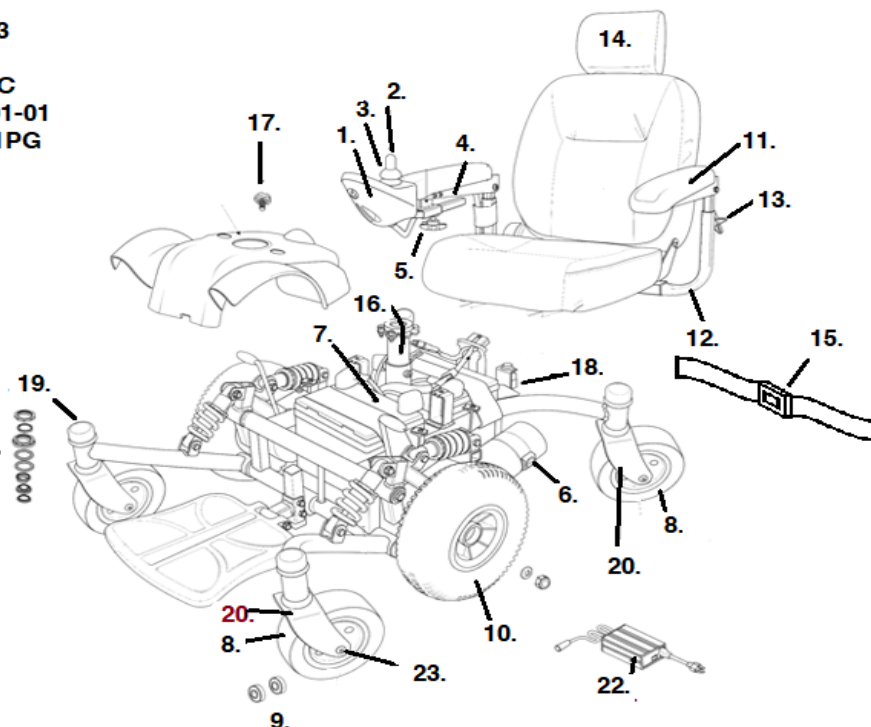

[1] Stock is gone use part 1c.

[2] When stock is gone the is no longer available.

01/11/2021

[Diagrams](#)

[Home](#)