


PILOT 2310

Only parts listed below are available.

1. Upper Control Panel
PC Board Gen 1- LRA402204
PC Board Gen 2- [1]
PC Board Gen 3- LRA402204-03
Speed Dial Knob- LRA402204-03SD
Horn- LRM402200-21
2. Key Switch- LRB402232-02
Key- LRB402203-01
3. Throttle- LRA402202
Throttle Spring- LRA402206-02
4. Basket- LRA402226
4. Basket Liner- 402206-FBL
5. Basket Bracket- LRM412101-08
6. Tiller Adj. Knob- LRA402201-23
7. Shroud Knob- LDR410115-03
8. 18" Seat Assembly- ST205-181820-S [2]
20" Seat only- ST301-201820
20" Seat Assembly- ST301-201820-S [2]
9. Armrest Pad Bolt On- LDR410110
Armrest Assy. Bolt On Lt.- LDR410011L
Armrest Assy. Bolt On Rt.- LDR410011R
Armrest Assy. Slide On Lt.- [3]
Armrest Assy. Slide On Rt.- [3]
- 10a. Armrest Height Adj. Knob- LDR410011-12
- 10b. Armrest Width Adj. Knob- LDR410011-11
11. Rear Wheel Grey (sub)- LDR410008
12. Battery (2 needed)- LRA402208
13. Seat Slides (pr)- LRA402317
Seat Plate- LRC402414

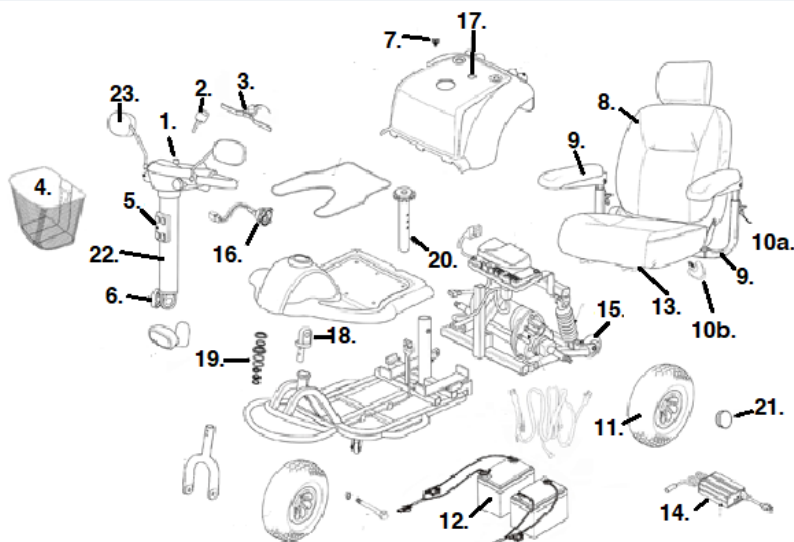

14. Battery Charger- LRA402209
15. Anti-Tipper Wheel- LRB302311
16. Charger Port Gen 1- LRA402210-02
Charger Port Gen 2- LRA402210-03
17. Circuit Breaker- LRA402207
18. Lower Folding Hinge- LRB402345
19. Tiller Bearing Seat- LRB402348
20. Seat Post- LRC402414-13
21. Hub Cap- LRM412202-HC

22. Tiller- LRB402300-01
23. Mirror Right- LRA402225-01
Mirror Left- [4]

[1] No longer available. Use 1 each of
[1] LRA402204-03 & LRA402204-03SD
[2] Seat assembly includes armrests,
[2] seat slides & bracket
[3] No longer available use bolt on armrests.
[4] No longer available.

12/08/2021

Diagrams

Home