


SPITFIRE 1310

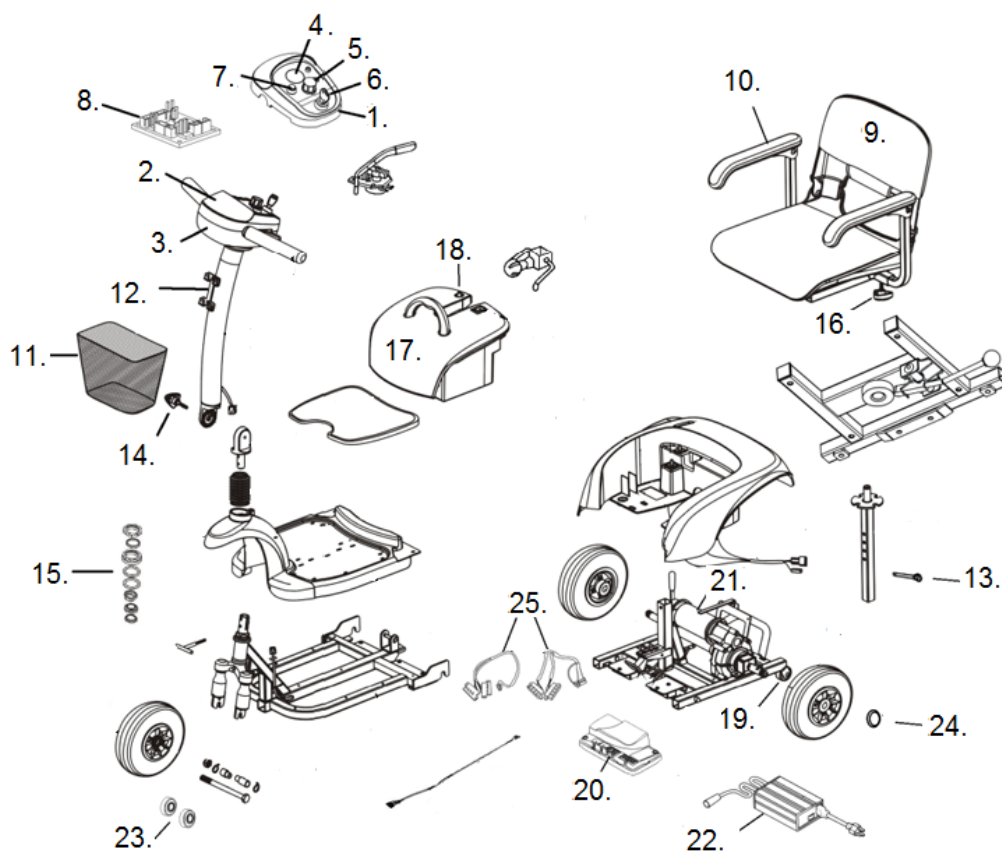

Parts are no longer available except what is listed below

- | | | |
|--|--|---|
| 1. Control Panel Assy.- LRM414100 | 8. PC Board- LRM302104 | 17. Battery (2 needed)- LRM402109 |
| 2. Control Panel Decoration | 9. Seat Assembly- LRM302116-02 | Battery Box & Batteries- LRM302108 |
| Blue- LRM412103-03B | Back Cover- LRM302213-08 | 18. 20 amp Circuit Breaker- LRM302107 |
| 3. Lower Control Panel Cover- LRM412101-15 | Seat Cover- LRM302213-09 | Substitute- LRM302207 |
| 4. Battery Gauge- LRM412103-05 | 10. Armrest Pad- LRM302115-01 | 19. Anti-tipper Wheel- LRM302114 |
| 5. Speed Dial Assembly- LRM412103-10 | 11. Basket- LRA402226 | 20. Controller- LRM412105 |
| Speed Dial Knob- LRM412103-11 | Basket Liner- LRA402206-FBL | 21. Gearbox Only- LRM412106-01 |
| 6. Key Switch- LRB402323-02 | 12. Basket Bracket- LRM412101-08 | 21. Brake (black connector)- LRM302106-03 |
| Key- LRB402323-01 | 13. Seat Post Pin- LRM302200-28 | 22. Battery Charger- LRM302111 |
| 7. Horn Assembly- LRM412103-08 | 14. Tiller Adjustment Knob- LRA402201-23 | 23. Front Wheel Bearings (pr)- S350100-B |
| | 15. Tiller Bearing Set- LRB402348 | 24. Hub Cap- LRM412202-HC |
| | 16. Armrest Locking Knob- S31052 | |

02/26/2021

[Diagrams](#)

[Home](#)