

SPITFIRE LTE

SFLTE316FS



- | | |
|---|---|
| 1. On-Off Switch- SFLTE-01 | 31. Battery Contact Kit- SFLTE-29 |
| 2. Throttle Pot Only- SFLTE-02 | 32. Battery Harness- SFLTE-30 |
| Throttle Lever Only- SFLTE-18 | 33. Controller- SFLTE-28 |
| 3. Speed Pot- SFLTE-03 | 34. Rear Wheel- SFLTE-33 |
| 4. Back Up Beeper- (1) | 35. Motor & Brake- (1) |
| 5. Battery Gauge- SFLTE-05 | 36. Brake- SFLTE-36 |
| 6. Speed Knob- SFLTE-06 | 37. Motor Coupler- SFLTE-37 |
| 7. Upper Tiller Cover- (1) | 38. Motor, Brake, Transaxle Assy- SFLTE-34 |
| 8. PC Junction Board- (1) | Motor Axle Key Way- (1) |
| 9. White LED- SFLTE-15 | Transaxle- (1) |
| 10. Key- SFLTE-17 | 39. Battery Box w/o Batteries- SFLTE-39 |
| 11. Basket- SFLTE-51 | Battery Box Complete- SFLTE-52 |
| 12. Basket Mtg Bracket- SFLTE-20 | Battery (2 needed)-ES12-12TE |
| 13. Lower Tiller Cover- (1) | Serial # 7Z1706000001 to 520 |
| 14. Hand Grip (pr)- (1) | Battery (2 needed)- LRM402109 |
| 15. Tiller Handle- (1) | Serial # 7Z1706000521 & higher |
| 16. Tiller Accent- (1) | 40. Battery Box Hold Down Bracket- SFLTE-40 |
| 17. Tiller Shroud- (1) | 41. Charger Socket & Harness- (1) |
| 18. Tiller Swivel Assy & Hdwr- SFLTE-12 | 42. Circuit Breaker with Harness- SFLTE-42 |
| 19. Tiller Swivel Knob- SFLTE-11 | 43. Seat Plate- SFLTE-45 |
| 20. Fork Bearing Set- SFLTE-14 | 44. Seat & Seat Plate w/o Arms- SFLTE-44 |
| 21. Fork- SFLTE-09 | 45. Armrest- SFLTE-48 |
| 22. Front Wheel Cover (ea)- (1) | 46. Armrest Assy Right- SFLTE-46 |
| 23. Front Wheel Assembly- SFLTE- (1) | Left- SFLTE-47 |
| 24. Front Wheel Bearing (pr)- SFLTE-43 | 47. Seat Post- SFLTE-38 |
| 25. Front Axle- SFLTE-13 | 48. Seat Post Pin- SFLTE-50 |
| 26. Front Shroud- SFLTE-19 | 49. Anti-Tipper Wheel- (1) |
| 27. Floor Pan- SFLTE-26 | 50. Charger 2 amp- LRM302111 |

28. Floor Mat- [1]
29. Rear Shroud- [1]
30. Main Wire Harness- [1]

51. Battery Box & Seat Locking Knob- SFLTE-54

[1] Stock is gone the part is no longer available.

02/10/2021

[Diagrams](#)

[Home](#)