

CURTIS 1212 FLASH CODES

When the Curtis 1212 controller senses a fault the red battery indicator LED, furthest to the left on the battery gauge, will flash a two digit flash code, then stop and then start the sequence again.

Flash Code	Meaning	Possible Reason and Solution
1-1	Thermal Fault	<p>The motor current has been at the maximum value too long.</p> <ul style="list-style-type: none"> *The motor may not be strong enough for the terrain (terrain too steep). *The wheels may be rubbing on the frame. <p>The motor may be faulty.</p> <ul style="list-style-type: none"> *Test the motor. *Check the motor brushes. <p>The controller overheats.</p> <ul style="list-style-type: none"> *Turn the unit off and let controller cool down.
1-2	Throttle Fault	<p>Check the throttle wiring and connection.</p> <ul style="list-style-type: none"> *Test the throttle. *Replace the throttle if defective.
1-3	Speed Pot Fault	<p>Check the speed pot wiring and connection.</p> <ul style="list-style-type: none"> *Test the speed pot. *Replace the speed pot if defective.
1-4	Low Voltage	<p>Check the battery cables and connections.</p> <ul style="list-style-type: none"> *Charge the batteries.
1-5	High Voltage	<p>Batteries are overcharged.</p> <ul style="list-style-type: none"> *If driving downhill slow down and turn lights on, if so equipped. *Test the charge to ensure that it cuts off when batteries are fully charged
2-1 or 2-3 or 2-4	Main Faults	<p>Check the controller wiring and connection.</p> <ul style="list-style-type: none"> *Replace the controller.
3-1	Throttle Fault	<p>The throttle is misadjusted.</p> <ul style="list-style-type: none"> *Test and adjust the throttle. *Replace the throttle if it cannot be adjusted.
3-2 or 3-4	Brake Fault	<p>The brake is not engaged.</p> <ul style="list-style-type: none"> *Engage the brake. *Check the brake wiring and connections. *Test the brake. *Replace the brake if defective.
3-3	Precharge Fault	<ul style="list-style-type: none"> *Turn unit off and turn on without engaging the throttle. <p>If fault does not clear replace the controller.</p>
3-5	HDP Fault	<p>If fault is right out of the box, it is either throttle or controller.</p> <p>If unit has been used for some time replace the throttle.</p>

4-1 or 4-2 or 4-4	Motor or Controller Fault	<p>The motor has a short</p> <ul style="list-style-type: none"> *Check the motor wiring and connections. *Check the motor brushes. *Replace the motor. <p>The controller has failed.</p> <ul style="list-style-type: none"> *Check the controller wiring and controller. *Replace the controller.
-------------------------	---------------------------------	--

[Home](#)