



1. Side bearing unto fork stem.

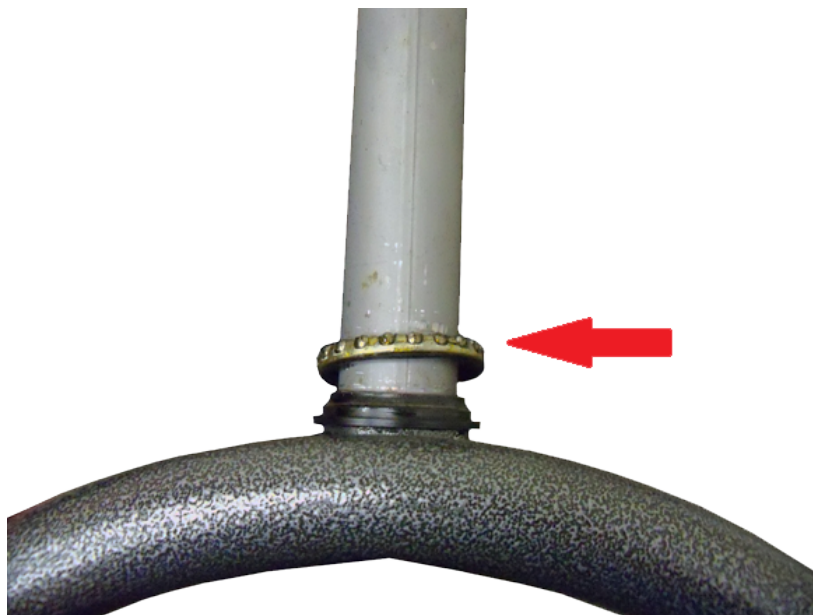

2. Slide fork stem into housing.



3. Place a bearing on the top racer.

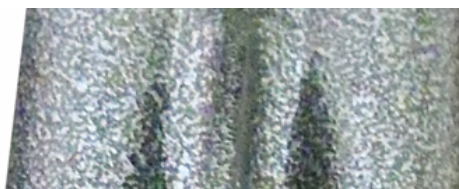



4. Screw on the racer cap unto the fork stem.






5. Screw on the locking nut unto the fork stem.





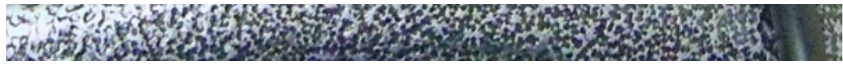

6. Installation is complete.



[Home](#)