

TRANSPORT CHAIRS BACKS NOT LOCKING



1. One cause of the backrest not locking is the locking pin does not come out far enough to engage.



2. Lightly grip the pin end of the locking pin with a pair of pliers. Place a wrench on the nut side of the locking pin.





3. Turn the nut counterclockwise to lengthen the locking pin.





Home