

EXPEDITION BRAKE ADJUSTMENT



Loosen up the Allen head screws. Slide the brake up for less pressure or down for increase pressure. Tighten up the Allen head screws.

EXP19

Home