


TRANSPORT CHAIRS LOOSE PUSH HANDLES

1. Remove the nut and screw holding the handle onto the folding cane hinge and examine the hole that the screw went through. If it is elongated replace the handle.

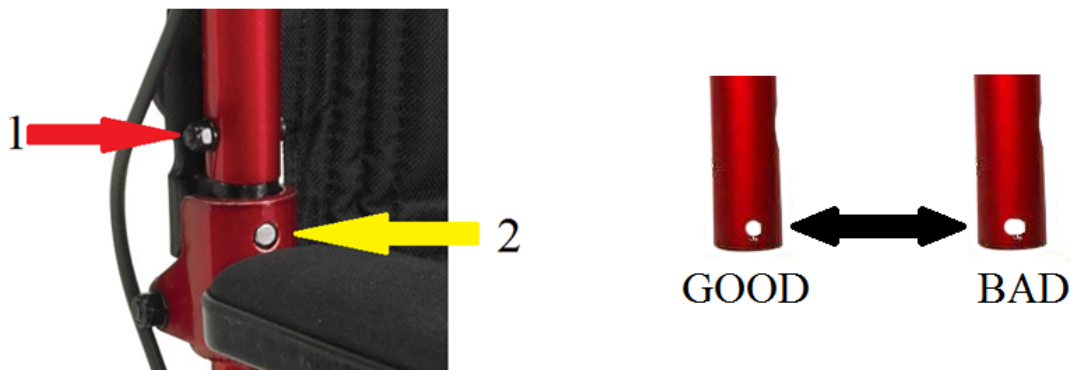

2. Verify that the locking pin extends all the way through the receiver. If it does not it can be adjusted by gripping the pin and turning the nut counterclockwise.



Home