

# HOW TO CHANGE A REAR WHEEL ON A NITRO

1. Lock the wheel.



2. Using a small flat end screw driver pry off the hub cap.



3. Using a 13mm socket remove the locknut from the axle.



4. Release the loop brake and slide off the wheel. Install the new wheel following the steps 1 to 4 in reverse.





[Home](#)