

HOW TO CHANGE THE OTTER TRIGGERS

assembly



step 1

Put seat and back in the upright position.



step 2


Carefully remove unibar from seat and back by pulling slightly on unibar and simultaneously holding on to the trigger.





step 3

Remove fabric from back or seat.

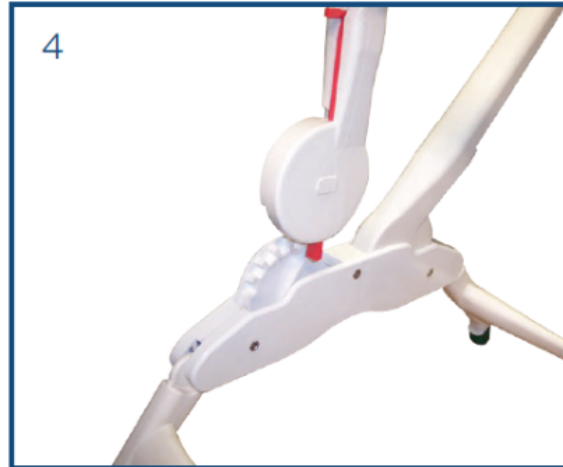

step 4

Remove seat or back by pulling on both triggers and pulling seat or back upwards.



step 5

Remove spring and remove defective trigger.

step 6

Install new trigger and reverse.