


# HOW TO ADJUST A QUICK RELEASE AXLE

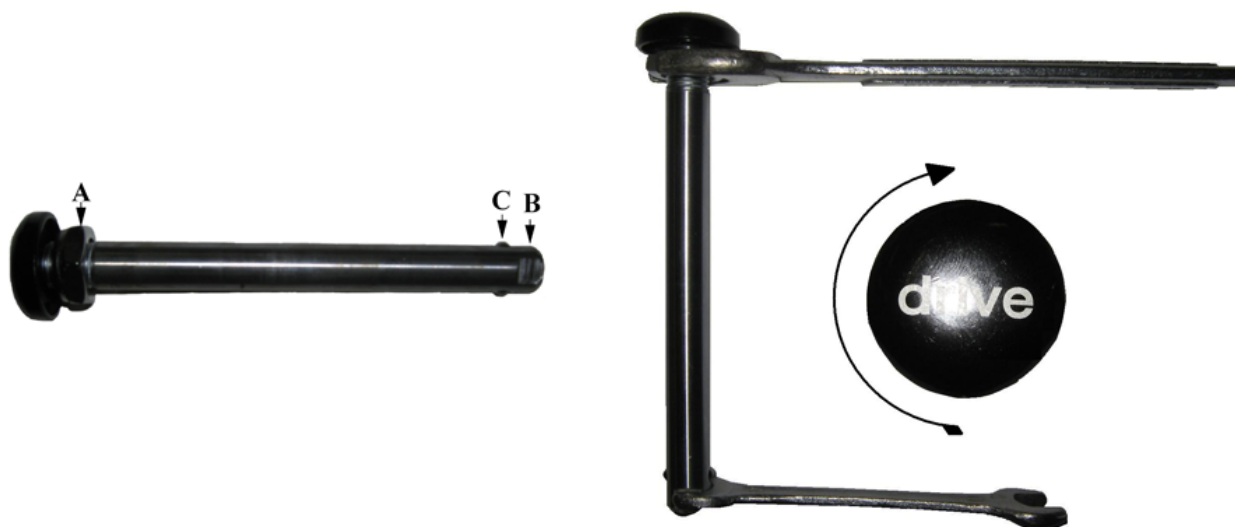

1. Check the play in the wheel and make sure it spins freely.
2. To adjust the play the wheel must be removed.
3. The axle nut (A) is easiest to adjust with a wrench.
4. The axle has to be held with either a wrench on the flat spots (B) near the other end or a wrench in line with the balls (C).
5. Keep tinkering with the length of the axle until the wheel has the least amount of side play when the plunger still pops out.

[Home](#)