



SCOUT

REPLACING A CONTROLLER


1. Using a #2 Phillips* screw driver remove the 4 screws holding the floor panel to the frame.

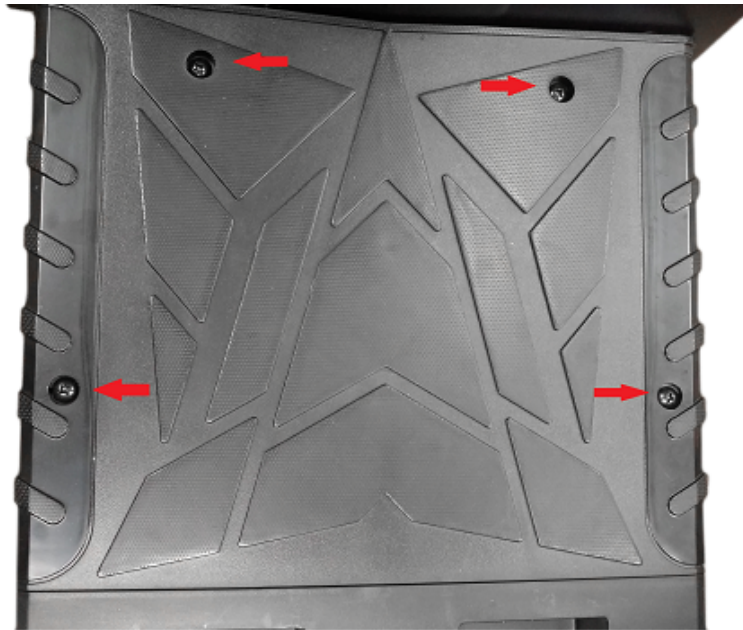

2. Remove floor panel from the frame.

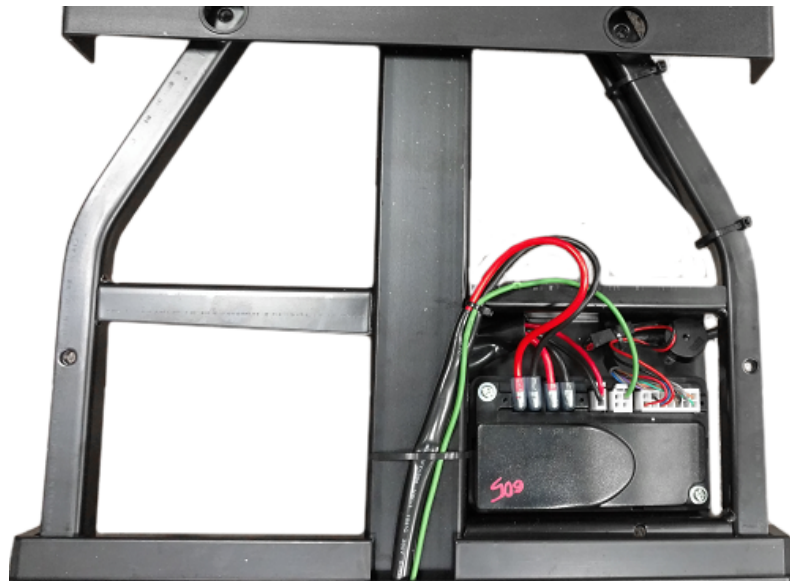

3. Unplug all connections, remove mounting screws (yellow arrow) using a #2 Phillips* screw driver and remove controller.

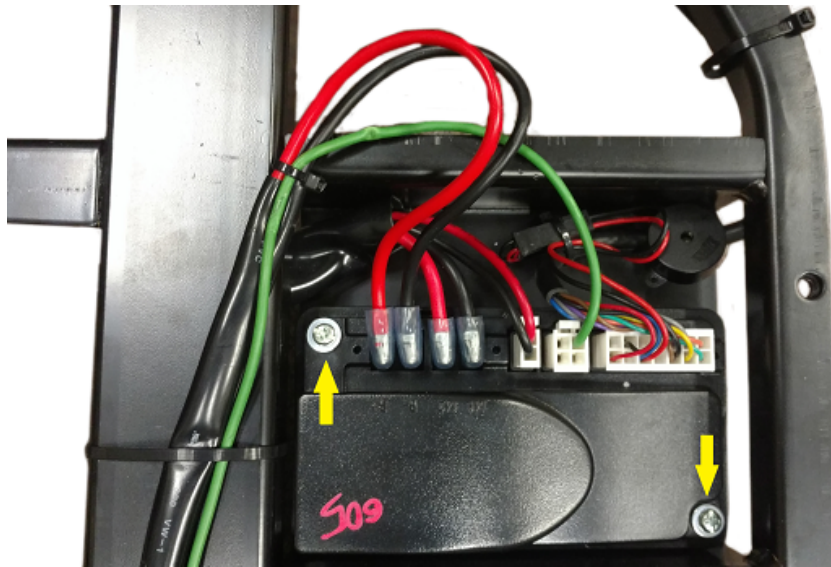

4. Follow instructions in reverse to install controller.

* Older units may use a Torx screw.

[Home](#)