

How to change a seat rail guide.

1. Turn the chair on its front or back and locate the cross brace bolt.




2. Remove the cross brace bolt.



3. Check to see if there is a spring or spacer between the two sections of the cross brace.



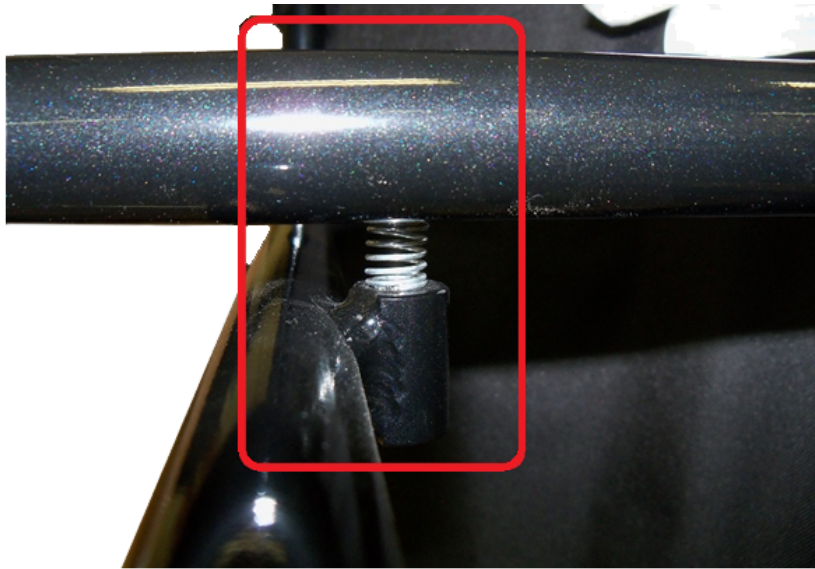

4. Remove the spring or spacer.




5. Stand the chair upright and twist the frame by pushing on one push handle and pulling on the other.





6. This will allow the removal of the defective seat rail guide.

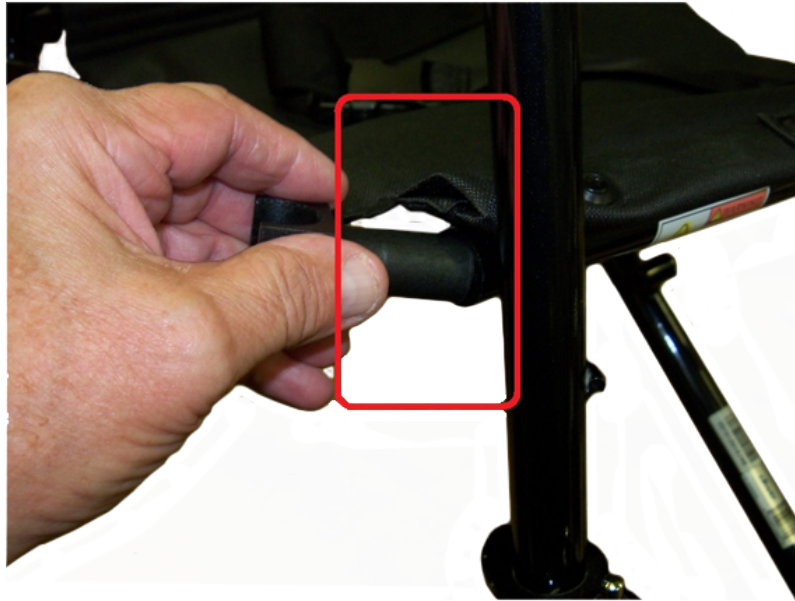

7. Install the new seat rail guide in reverse.

[Home](#)