

# HOW TO ADJUST TOOL FREE FOOT REST


1. Located the tool free locking mechanism.



2. Flip open the lever on the tool free locking mechanism.



3. Depress the double push button.

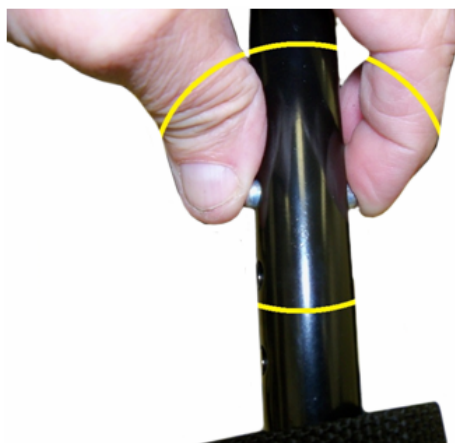

4. Turn the footplate slightly, slide to desired length and engage the double push button.



5. Close the locking lever on the tool free mechanism.



[Home](#)