


COUGAR

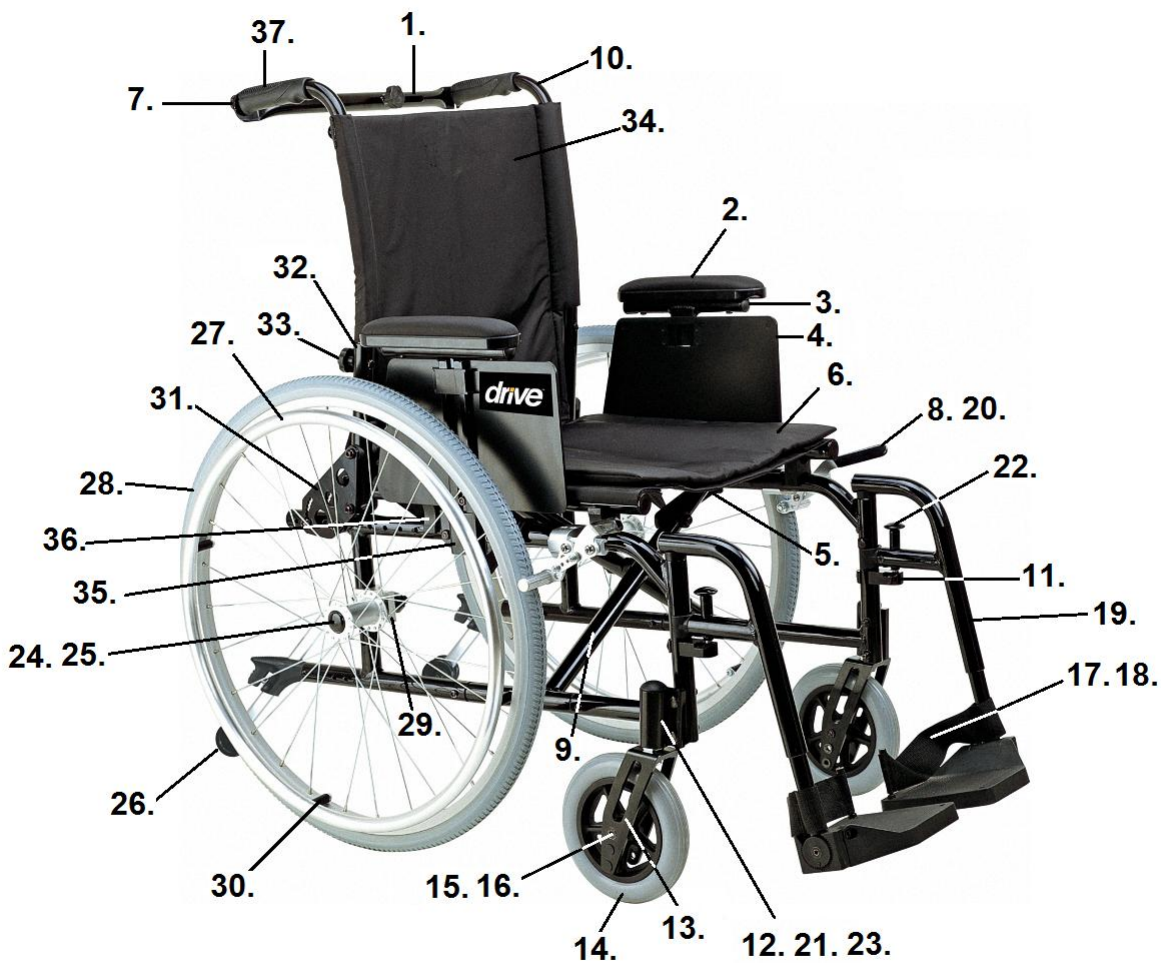

Only parts listed are available.

- | | |
|---|---|
| 1. Back Support Bar- STDS2A4336 | 20. Wheel Lock Left- STDS2A432L
Wheel Lock Right- STDS2A432R |
| 2. Desk Arm Pad- STDS2A4336 | 21. Dust Cap- STDS1051 |
| 3. Armrest "T" Frame- STDS2A4301 | 22. F/R Release Knob- STDS2A4322 |
| 4. Arm Panel Left- STDS2A431L
Arm Panel Right- STDS2A431R
Arm Assembly Left- STDS2A438-L
Arm Assembly Right- STDS2A438-R | 23. Bearing Housing Left- STDS2A4321
Bearing Housing Right- STDS2A4321R |
| 5. Cross Frame Assist 16"- STDS2A4305-16
Cross Frame Assist 18"- STDS2A4305-18
Cross Frame Assist 20"- STDS2A4305-20 | 24. Rear Bearing- STDS1012 |
| 6. Seat Upholstery 16"- STDS2A4306
Seat Upholstery 18"- STDS2A4308 | 25. Q/R Rear Axle- STDS1A3511 |
| 7. Spreader Bar Knob- LDR410115-03 | 26. Anti-Tipper (pr)- STDS2A4326 * |
| 8. Wheel Lock Tip- STDS2A4335 | 27. Hand Rim- STDS2A4330 |
| 9. Cross Frame 18"- STDS2A43X8
Cross Frame 20"- STDS2A432X | 28. Rear Wheel Assembly- STDS2A4300 |
| 10. Back Cane- STDS2A4307 | 29. Rear Axle Bracket- STDS2A4329N
After Ser # 2A07110001 |
| 11. Footrest Locker Receiver- STDS2A4309 | 30. Hand Rim Spacer & Screw- STDS2A4327 |
| 12. Fork Stem Bearing- STDS2A4333 | 31. Back Adjustment Bracket Left- STDS2A4328
Back Adj. Bracket Right- STDS2A4328-R |
| 13. Fork- STDS2A4304 | 32. Pivot Extension- STDS2A4303 |
| 14. Caster- STDS2A4310 | 33. Backrest Knob- STDS895 |
| 15. Caster Axle- STDS2A4313 | 34. Back Upholstery 16"- STDS2A4316
Back Upholstery 18"- STDS2A4318
Back Upholstery 20"- STDS2A4320 |
| 16. Caster Bearing- STDS2A4314 | 35. Armrest Receiver- STDS2A4302 |
| 17. Heel Loop (pr)- STDS831 | 36. Seat Saddle- STDS4058 |
| 18. Heel loop Post- STDS1M4047 | 37. Handgrip- STDS871 |
| 19. Footrest (pr)- A5SF-18
Elevating Leg Rest (pr)- A5ELR-18 | |

* When stock is gone, part will no longer be available.