


HOW TO INSTALL A TINNERMAN NUT

1. Take one of the nuts and install it over the top footrest stud.



2. Tighten the Allen set screw with the enclose Allen wrench.

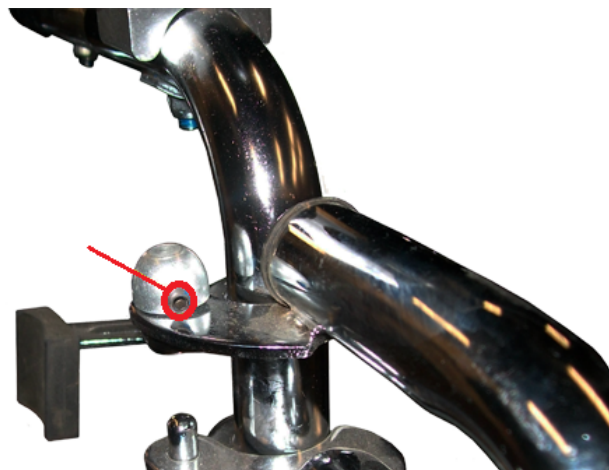

3. Repeat on the other side.





[Home](#)