


HAND PENDANT CONTROL SP01-HB70-C101-00

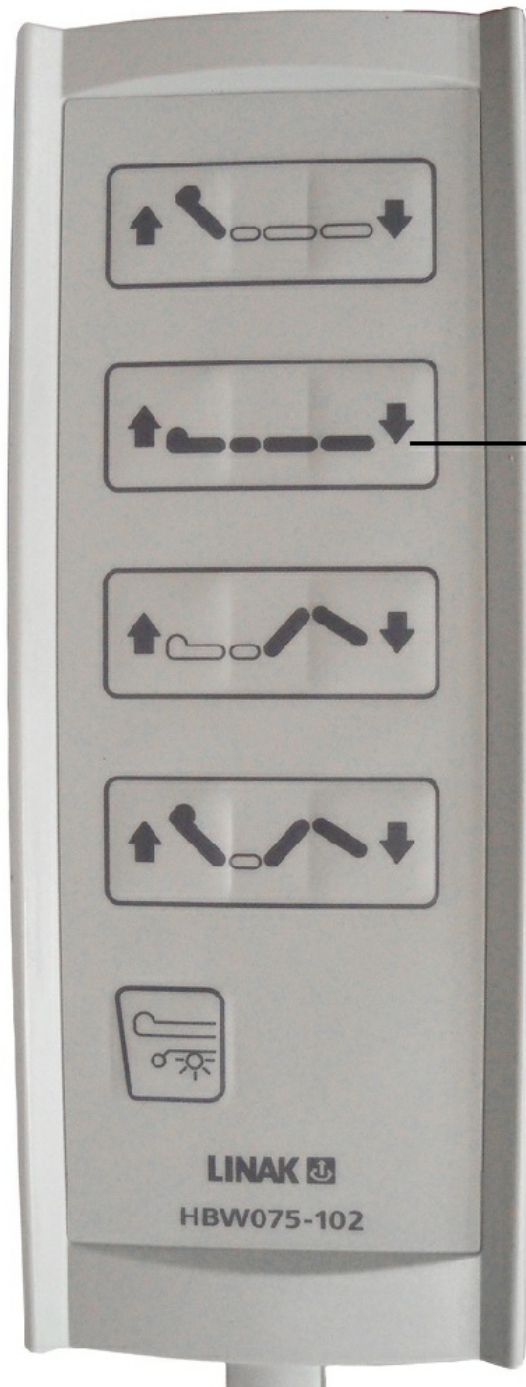

1. LOWER BED TO LOWEST POSITION.

2. RELEASE BED FRAME DOWN BUTTON.

3. PRESS AND HOLD BED FRAME DOWN BUTTON FOR 10 SECONDS TO RECALIBRATE SYNCHRONIZATION.